



SUSPENSION SEATS

OPERATIONAL GUIDE


For one seated individual. Maintenance Specialist is recommended. Please visit us at www.ultraseat.com for more information regarding this product.

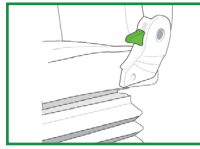


C1 J SERIES

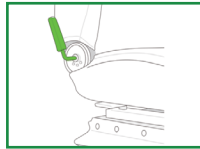



C2 T SERIES

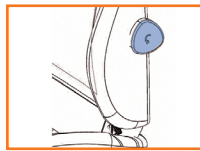


D1 MECHANICAL LUMBAR

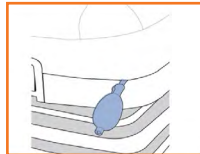


D2 AIR LUMBAR

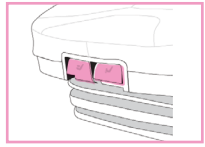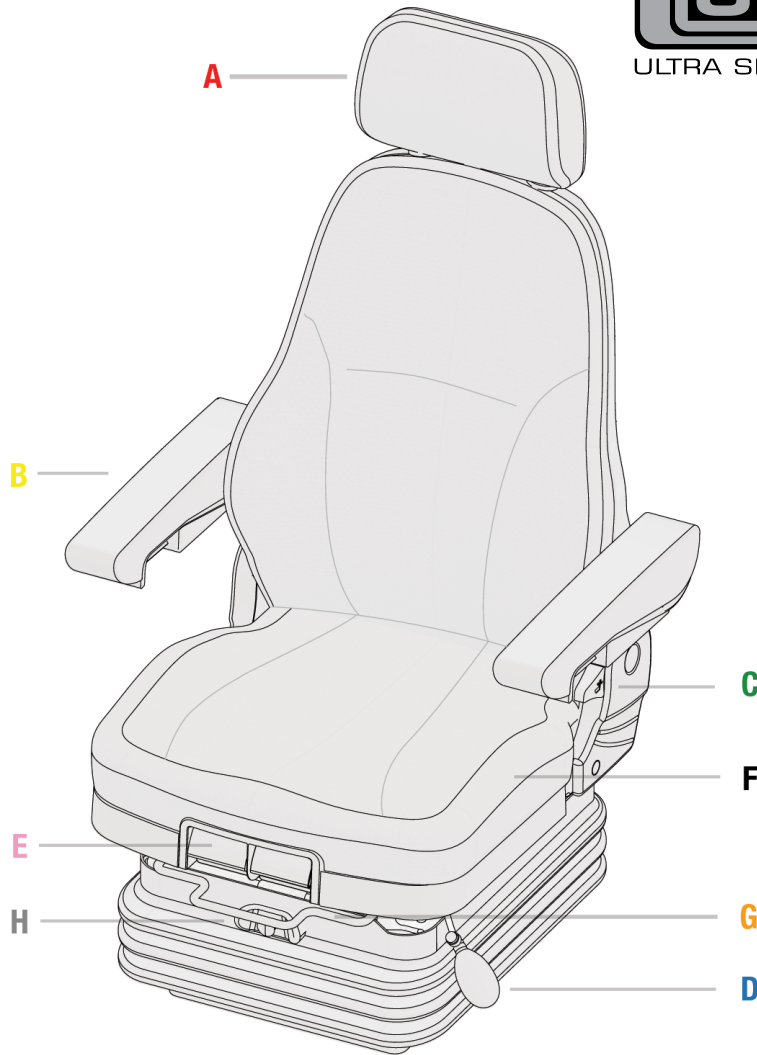

E ADJUSTABLE SEAT CUSHION J700 / J900

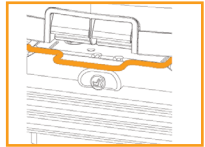

G UPPER RAIL SEATS

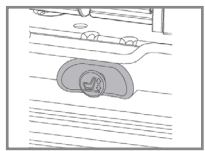

H WEIGHT ADJUSTMENT VALVE

SEAT FEATURES

A Adjustable Headrest
To adjust headrest height, pull up or push down on the headrest to the desired position. To adjust headrest angle (T800 Only), pull or push headrest to desired position. (T300 Series - No Headrest Option)

B Tip-Up Armrests
To adjust the angle of the armrest, use the roller adjuster located on the bottom of the armrest. The armrests can be tilted all the way up when not in use. (M Series - No Armrest Option)

C Seat Recline Adjustment
J Series/T Series/M400 Series Seats: To adjust the recline angle of the seat, pull up or push back on recline handle located on the side of the seat cushion, lean backwards or forwards to the desired position, and release the handle.
K Series Seats: Rotate the recline knobs forward or backward until the desired position is reached.

D Adjustable Lumbar
Mechanical Lumbar: To increase lumbar support, rotate the knob toward the front of the seat. To decrease lumbar support, continue rotating the lumbar knob forward until the support level resets.
Air Lumbar: To increase lumbar support, squeeze bulb located below front of seat cushion, to decrease lumbar support, push release button.

E Seat Pan Adjustment (J700/J900 Series Only)
Length adjustment: Lift up the seat cushion length adjustment handle to slide the seat cushion forward or backward.
Tilt adjustment: Lift up on the seat cushion tilt lever to raise or lower the seat cushion angle.

SUSPENSION FEATURES

F Height Adjustment (S032 Suspension only)
Pull up on seat cushion until it clicks to increase ride height. To decrease ride height, pull seat cushion up past the highest setting and release, this will reset the height to the lowest setting.

G Fore-aft Adjustment
Pull up on slide rail handle located between seat and suspension or bottom of suspension, slide the seat forward or backward to the desired position, and release the slide rail handle.

H Weight Adjustment
Mechanical Suspension: Rotate the knob located at the front of the suspension clockwise to increase weight rating.
Air Suspension: Push valve on the front of the suspension to increase air pressure/weight rating, pull on valve to decrease air pressure/weight rating.

SCAN FOR GUIDES



Guides also available at:
<https://www.ultraseat.com/downloads>

15002208