# 



Remove arms & headrest according to your seat instructions. If no arms are present, move to Step 3A.



Slide the headrest cover over your existing headrest, tuck in and secure the velcro tabs. Remove headrest completely from seat back and set aside while you install the back cover.



On the front of the back cover pull lower portion (the tabs) through the seat (inbetween cushion and back) ensuring the bottom tabs are fully pulled through to the back. (as shown in D2,E2)

Connect the 3 velcro horizontal straps (A1,B1,C1) on the left side to opposing velcro straps on right side (A2,B2,C2).Then connect the 2 top velcro long vertical straps (D1,E1) to the 2 tabs (D2,E2) pulled through in step 3A.



Adjust velcro straps to accordingly, and tighten or reposition where/if necessary.

SCAN FOR GUIDES



Guides also available at: https://www.ultraseat.com/downloads

#350107CK




Guides also available at: https://www.ultraseat.com/downloads

#350107CK



Slip the seat cover over your seat cushion. Push the back of the cover with the elastic cord loops through the gap between the back of the seat and seat cushion.

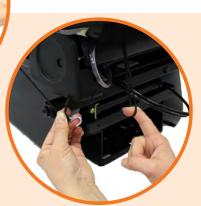

Pull the elastic cord with "S" hook around each side of the seat and secure to the elastic loop that you pushed through previously.



Re-install your seat arms and headrest according to your original seat instructions.

Note: If you find the lower portion of your seat cover loose after installation you may need to tighten the elastic cord with the "S" hooks. To do this, untie the knot that holds the "S" hook in place and slide further down the cord and re-tie the knot.