

ULTRA M4 SERIES ARMREST

INSTALLATION GUIDE

ULTRA M4 SERIES ARMRESTS

- Ultra "M4" Series



Phone: 1-800-667-7328
Fax: 1-888-667-7328
www.ultraseat.com



ULTRA SEAT CORPORATION

**Product in photo(s) may be different than purchased product,
For additional photos and information please visit
www.ultraseat.com*

07/06/2016

15001104

1


Remove the plastic covers on each side of the seat.



1 Bolt, 1 Lock Washer and 1 Flat Washer

2

Remove the nut from the recline stud on each side.

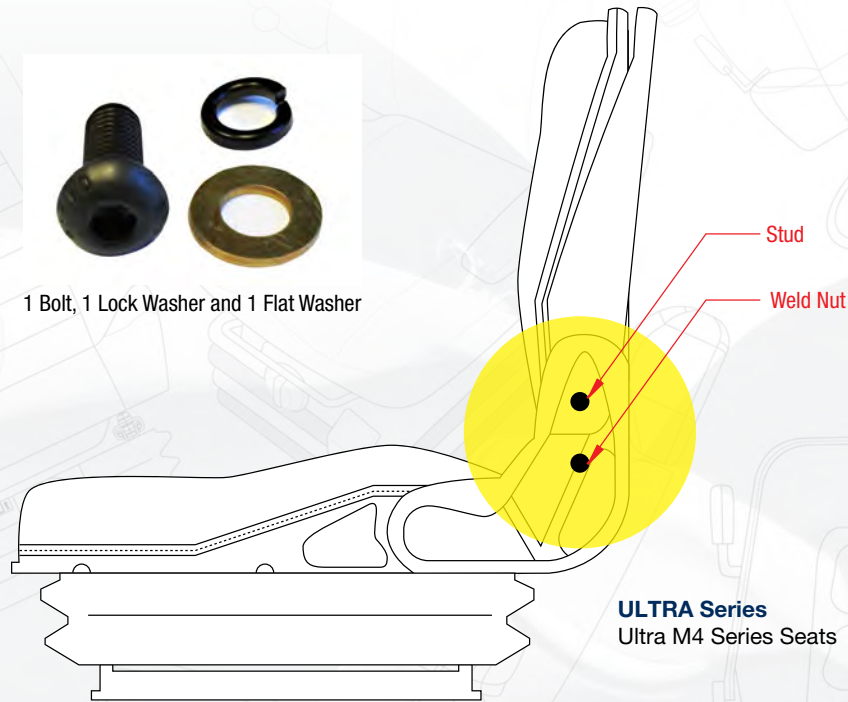

ULTRA Series
Ultra M4 Series Seats

3

Place the arm bracket over the stud and align with bottom threaded hole. Thread the nut back onto the studs. Please use the bolt, lock washer and flat washer supplied with the armrest. Attach lower part of arm bracket using the lower weld nut. Do not over tighten as this may strip the threads

4

Reinstall the plastic covers removed in step 1.

For one seated individual. Maintenance Specialist is recommended. Please visit www.ultraseat.com for more information regarding this product.

ULTRA M4 SERIES ARMREST INSTALLATION GUIDE